




1. Here is an overview of all the accessories for the installation of a mini-redundant power supply (PSU) in UNC-411E-B.

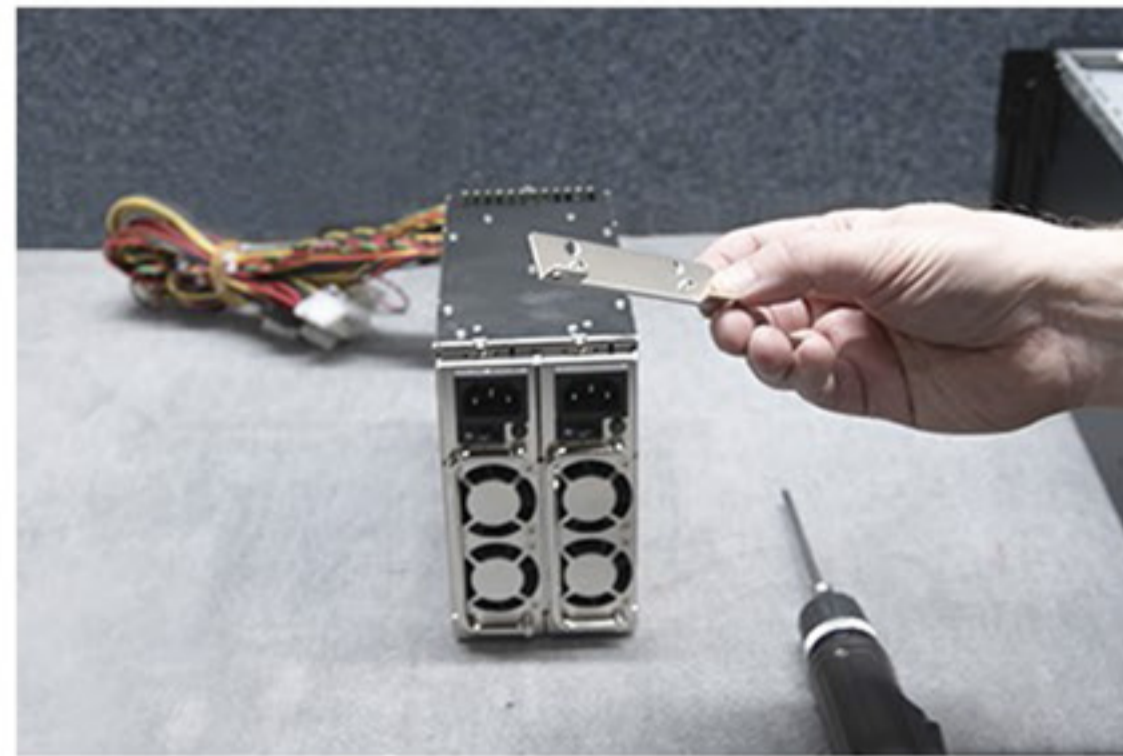

2. Install 2 screws on the bracket.



3. Remove the hard drive cage (HDD) cage.



4. Remove the screws on the PSU bracket.



5. Remove the PSU bracket.
(This bracket is only needed for an ATX PSU.)




6. Install the mini-redundant PSU in place, as shown in the picture.



7. Use 5 screws to fix the PSU.



8. Exchange the standard PCI bracket with the PCI bracket with the buzzer-reset button hole.

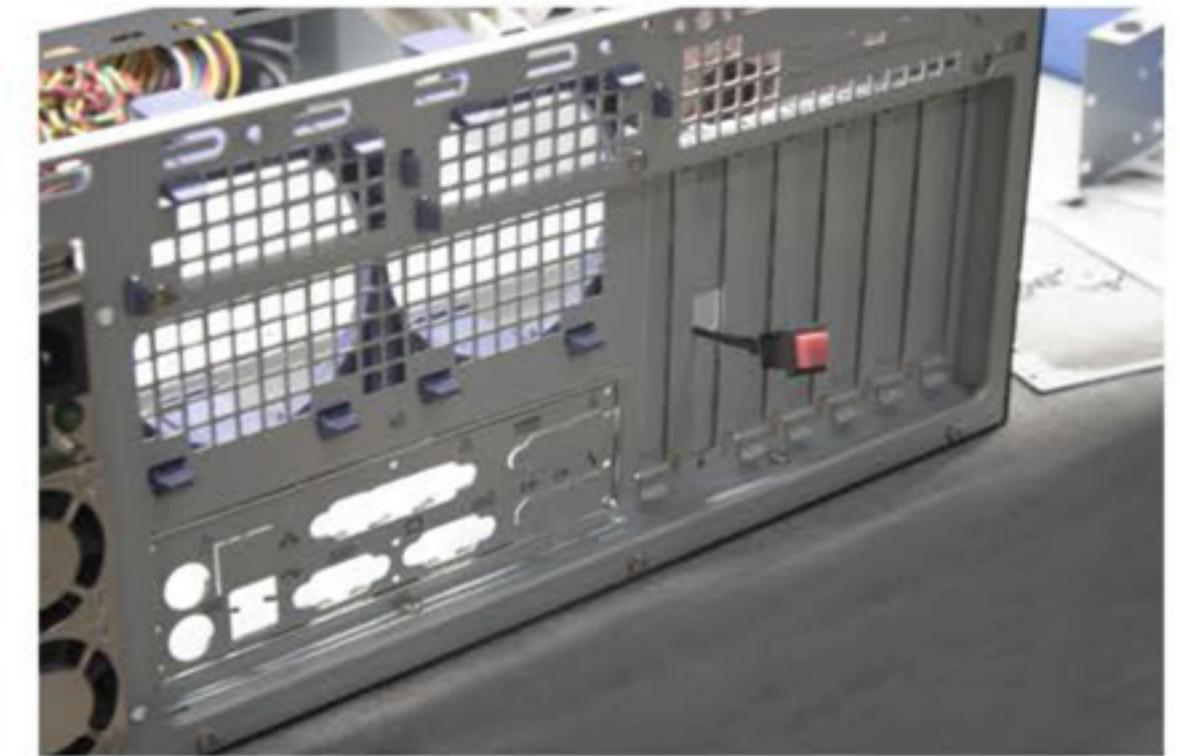

9. Place the cable of buzzer-reset button, as shown in the picture.



10. Connect the cable of the buzzer-reset button to the PSU.



11. Re-Install the HDD cage in place, as shown in step 3.